

Please Review

1. Removing the ground from the voltage regulator will damage it. Be sure there is a good ground between the regulator, alternator and battery negative.

2. To temporarily bypass regulator connect wire "3" to "F".

3. On indicator lamp systems, the indicator lamp circuit must be in working order.

4. **DO NOT** ground "R" terminal.

